



## 5-Button RF Remote Dimmer with Timer Instructions

- **Center Button (S5):** Press to turn the lights ON and OFF.
- **Top Button (S4):** Press to BRIGHTEN lights.
- **Bottom Button (S2):** Press to DIM lights.
- **Left Button (S1) & Right Button (S3):** The left & right buttons are the option keys to set the timer. Lights will flash to indicate the setting.  
(See notes on next page).

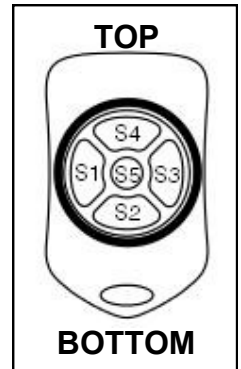

## 5-Button RF Remote Dimmer with Timer Instructions

- **Center Button (S5):** Press to turn the lights ON and OFF.
- **Top Button (S4):** Press to BRIGHTEN lights.
- **Bottom Button (S2):** Press to DIM lights.
- **Left Button (S1) & Right Button (S3):** The left & right buttons are the option keys to set the timer. Lights will flash to indicate the setting.  
(See notes on next page).

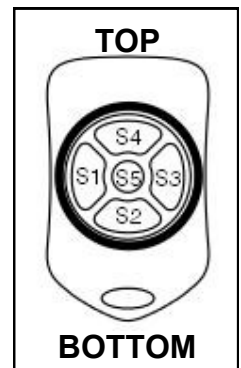

**Instructions:**

1. Press and hold S1. While continuing to hold S1, press S3 and release S3. Lights will flash ONE time, indicating the timer is set for 2 hours.
2. Repeat the step above. Lights will flash TWO times, indicating the timer is set for 4 hours.
3. Repeat step #1. Lights will flash THREE times, indicating the timer is set for 8 hours.
4. Repeat step #1. Lights will flash FOUR times, indicating the timer is set back to the dusk to dawn setting.

- **Note:** If you turn the lights on with S5 in the daylight, the lights will stay on infinitely until you turn them off with S5.
- **Note:** If you turn the lights on with S5 at night, the photo eye will operate normally.

**For additional product or installation assistance please call 888-305-4232.**

FOR USE WITH LANDSCAPE LIGHTING SYSTEM ONLY. THIS DEVICE IS ACCEPTED AS A LANDSCAPE LIGHTING SYSTEM WHERE THE SUITABILITY OF THE COMBINATION SHALL BE DETERMINED BY CSA OR LOCAL INSPECTION AUTHORITIES HAVING JURISDICTION. LANDSCAPE LIGHTING SYSTEMS ARE FOR OUTDOOR USE ONLY. NOT FOR USE IN DWELLING UNITS. DO NOT MOUNT POWER SUPPLY OR LUMINAIRES WITHIN 3M OF A SWIMMING POOL OR SPA. NOT FOR USE WITH SUBMERSIBLE FIXTURES. USE ONLY WITH I-LIGHTING EASY PLUG CONNECTOR CABLES AND POWER SUPPLIES. FOR ADDITIONAL CABLES PLEASE CALL 888-305-4232. EACH LANDSCAPE LIGHT PULLS 1 WATT EACH. USE ONLY 90% OF THE POWER SUPPLIES WATTAGE, ALLOWING 10% FREE. LOW VOLTAGE CABLE SHALL: BE PROTECTED BY ROUTING IN CLOSE PROXIMITY TO THE LUMINAIRE OR FITTING, OR NEXT TO A BUILDING STRUCTURE SUCH AS A HOUSE OR DECK; NOT BE BURIED EXCEPT FOR A MAXIMUM 6" (15.2CM) IN ORDER TO CONNECT TO THE MAIN LOW VOLTAGE CABLE; AND HAVE THE LENGTH CUT OFF SO THAT IT IS CONNECTED TO A CONNECTOR WITH 6" (15.2CM) FROM A BUILDING STRUCTURE, A LUMINAIRE, OR FITTING.

Cage #: 6W3X6

Item #: RF TIM

Date: \_\_\_\_\_

**Instructions:**

1. Press and hold S1. While continuing to hold S1, press S3 and release S3. Lights will flash ONE time, indicating the timer is set for 2 hours.
2. Repeat the step above. Lights will flash TWO times, indicating the timer is set for 4 hours.
3. Repeat step #1. Lights will flash THREE times, indicating the timer is set for 8 hours.
4. Repeat step #1. Lights will flash FOUR times, indicating the timer is set back to the dusk to dawn setting.

- **Note:** If you turn the lights on with S5 in the daylight, the lights will stay on infinitely until you turn them off with S5.
- **Note:** If you turn the lights on with S5 at night, the photo eye will operate normally.

**For additional product or installation assistance please call 888-305-4232.**

FOR USE WITH LANDSCAPE LIGHTING SYSTEM ONLY. THIS DEVICE IS ACCEPTED AS A LANDSCAPE LIGHTING SYSTEM WHERE THE SUITABILITY OF THE COMBINATION SHALL BE DETERMINED BY CSA OR LOCAL INSPECTION AUTHORITIES HAVING JURISDICTION. LANDSCAPE LIGHTING SYSTEMS ARE FOR OUTDOOR USE ONLY. NOT FOR USE IN DWELLING UNITS. DO NOT MOUNT POWER SUPPLY OR LUMINAIRES WITHIN 3M OF A SWIMMING POOL OR SPA. NOT FOR USE WITH SUBMERSIBLE FIXTURES. USE ONLY WITH I-LIGHTING EASY PLUG CONNECTOR CABLES AND POWER SUPPLIES. FOR ADDITIONAL CABLES PLEASE CALL 888-305-4232. EACH LANDSCAPE LIGHT PULLS 1 WATT EACH. USE ONLY 90% OF THE POWER SUPPLIES WATTAGE, ALLOWING 10% FREE. LOW VOLTAGE CABLE SHALL: BE PROTECTED BY ROUTING IN CLOSE PROXIMITY TO THE LUMINAIRE OR FITTING, OR NEXT TO A BUILDING STRUCTURE SUCH AS A HOUSE OR DECK; NOT BE BURIED EXCEPT FOR A MAXIMUM 6" (15.2CM) IN ORDER TO CONNECT TO THE MAIN LOW VOLTAGE CABLE; AND HAVE THE LENGTH CUT OFF SO THAT IT IS CONNECTED TO A CONNECTOR WITH 6" (15.2CM) FROM A BUILDING STRUCTURE, A LUMINAIRE, OR FITTING.

Cage #: 6W3X6

Item #: RF TIM

Date: \_\_\_\_\_